
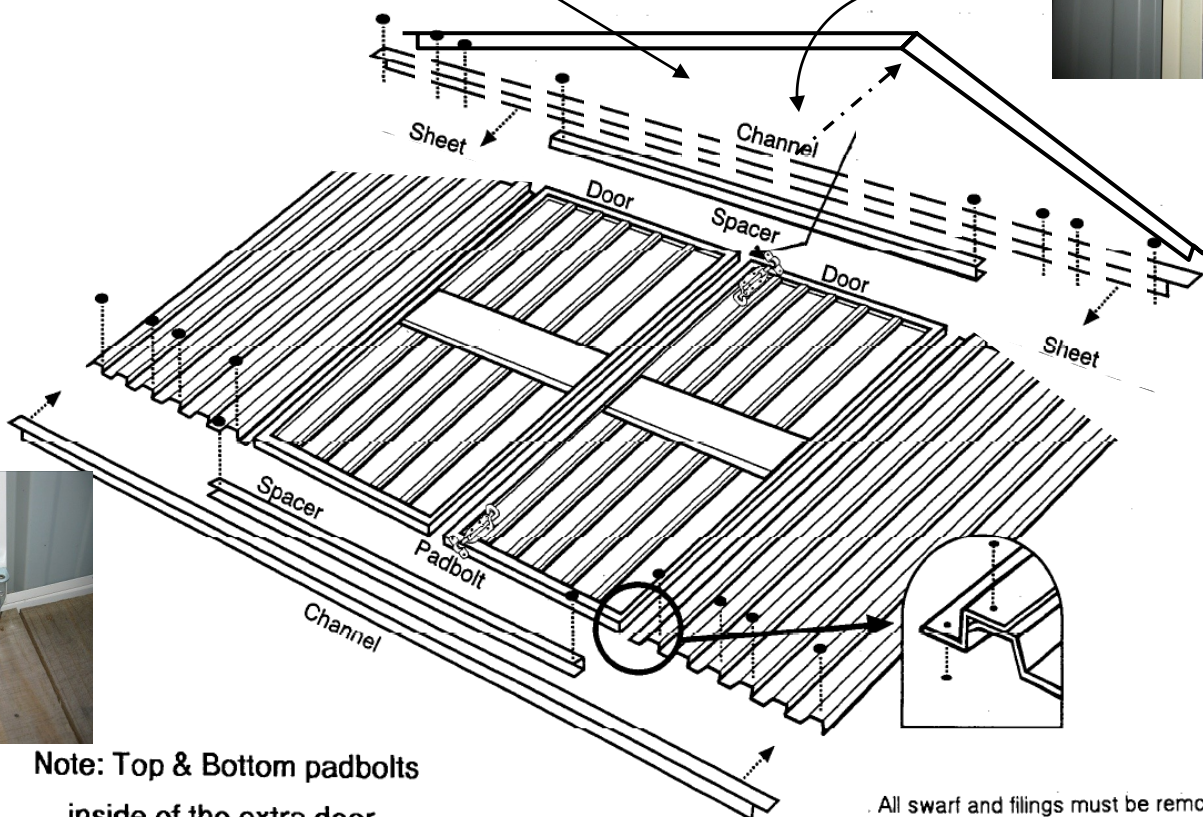


Door/s in gable end wall ASSEMBLY INSTRUCTIONS

Please read these instructions in conjunction with your standard shed instructions

1. Layout doors and sheets appropriate for your customised shed
2. Cut top channel in centre as per gable end wall instructions for a standard shed.
3. Fit top channel to angle cut sheets to follow the angle to peak in the centre. Fit bottom channel as standard. Measure opposite end wall to make sure both end walls end up the same height at the peak. Attach to sheets where possible according to standard shed instructions.
4. Fit top door spacer between door jambs approx 10mm above the top of the doors. Fix to door jambs at each end. You may have a short "Z" piece to go from top door spacer up to the peak of the top channel. If so fit inside channels and fix at ends.
5. Attach (A) flat sheet to top channel, door jambs and door spacer around the perimeter at approximately 300mm centres.
6. Finish as per standard instructions where necessary.

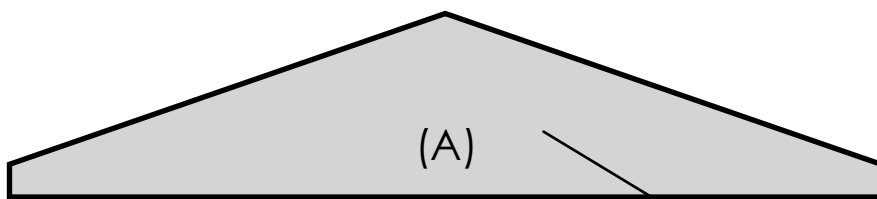

**Note: Top & Bottom padbolts
inside of the extra door.**

All swarf and filings must be removed