



**GALVO SHED**

SIMPLY GREAT STORAGE

# **GVO3030 WOODEN FLOOR PACK**

**Wooden Floor Pack for 3.03m X 3.03m Shed**

**Floor includes:** 19 Floor boards (150mm x 19mm) H3  
7 Runners (75mm x 50mm) H4 Tanalised  
1 pack galvanised Nails



[PTO for floor assembly instructions](#)





# GALVO SHED

SIMPLY GREAT STORAGE

## Wooden Floor instructions for GVO3030 shed

1. Set out 2 of the (75 x 50mm) runners at **3030mm** apart on your shed site. Space the spare runners in between.
2. Straddle #1 floor board (150 x 19mm) across runners at one end. Place it 25mm in from the end of the 2 outside runners. Temporarily nail at outside corners only for a start.
3. Measure **2985mm** to the other end of the runners and place #2 floor board 25mm in from edge of runner and temporarily nail at outside corners.
4. Square the floor across from corner to corner diagonally. This should measure approx **4220mm** depending on the accuracy of the precut floor boards and site levels. Check the central runners is/are evenly spaced between outside runners, check diagonal measurements again and complete nailing off the floorboards #1 and #2.
5. Layout internal floorboards, keeping ends of floorboards flush. Nail off after you have all the floor boards in place using 2 nails per board into each runner. In some cases final floorboard may need to be ripped down. Your floor is now complete.
6. To fix the shed to the floor simply, drill thru the bottom channel and the sheeting of the shed at every 2<sup>nd</sup> rib. (where there is no rivet). Tap a nail thru the inside lip of the channel into the flooring on the inside of the shed. **This is the only way we recommend to fix your shed to the floor.**

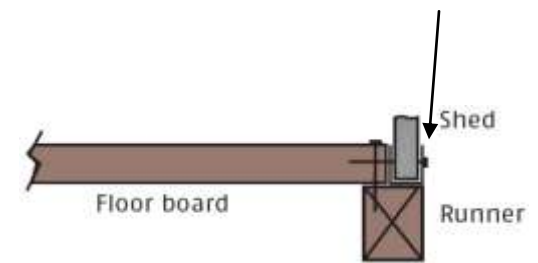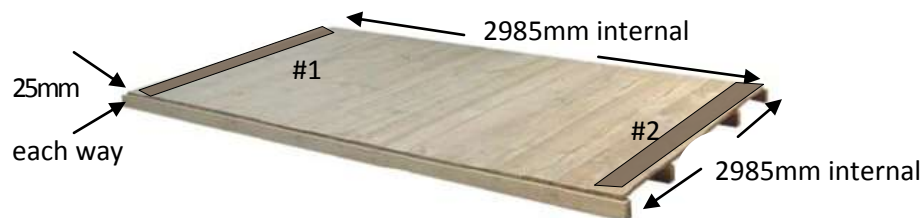

PEG FLOOR TO GROUND IN A WINDY AREA